



P.O. Box 220 16024 Hwy 431 Headland AL 36345
(334)-693-3318 (800)-654-8030 Fax (334)-693-5416

www.RushingEnterprises.com

HOT WATER WASHER OPERATING INSTRUCTIONS

1. Turn on water supply if applicable.
2. Move pump switch to "**PUMP ON**" position.
3. Pull wand trigger; if a steady stream of water at pressure does not flow from wand within a few seconds **IMMEDIATELY** turn switch to "**OFF**" position. Have a professional service tech correct the problem or contact your Rushing Enterprises technical service support team.
4. When a steady stream of water (at operating pressure) flows from the wand, move the switch to the "**BURNER**" position.
5. When the trigger is pulled the burner should fire (wand and water will get hot quickly). Release the trigger and the burner should go off. If this does not happen, **DO NOT** use this machine. Have a professional service tech correct the problem or contact your Rushing Enterprises technical service support team.
6. Adjust soap metering valve to draw chemical, if not preset or controlled by a wall mounted auto-controller. Closing the valve permits rinsing or turning off the soap selection switch will allow soap to clear the line for proper rinsing action.

TO SHUT DOWN:

1. Move switch to "**PUMP**" position.
2. Run machine 2-3 minutes; this will allow machine to go thru the normal cool down procedure.
3. Move switch to the "**OFF**" position.
4. Turn off water supply if applicable.

Rushing Performance.....Clean EVERY TIME!